


Seat Back Tube

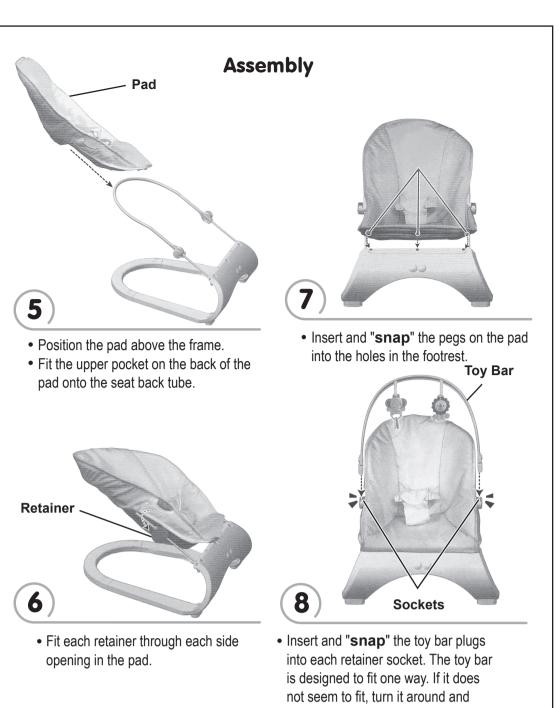


Hint: The toy bar is removable. Press the ends of the latches and lift the toy bar.

3



Hint: We recommend using an alkaline battery for longer battery life.

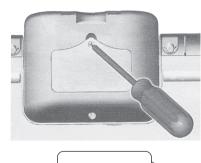

1,5v x 4 AA (LR6)

- Loosen the screw in the battery compartment door and remove the door.
- Insert four AA (LR6) alkaline battery into the battery compartment.
- Replace the battery compartment door and tighten the screw.
- If this product begins to operate erratically, you may need to reser the electronics. Slide the power switch off and then back on.

Battery Safety Information

In exceptional circumstances, batteries may leak fluids that can cause a chemical burn injury or ruin your product. To avoid battery leakage:

- Do not mix old and new batteries or batteries of different types: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Insert batteries as indicated inside the battery compartment.
- Remove batteries during long periods of non-use. Always remove exhausted batteries from the product. Dispose of batteries safely. Do not dispose of this product in a fire. The batteries inside may explode or leak.
- Never short-circuit the battery terminals.
- Use only batteries of the same or equivalent type, as recommended.
- DO not charge non-rechargeable batteries.
- Remove rechargeable batteries from the product before charging.
- If removable, rechargeable batteries are used, they are only to be charged under adult supervision.

Setup and Use




• "Snap" the base assembly into the

front cross brace.

2

• Tighten each waist belt so that the restraint system is snug against your child. Please refer to the next section for instructions to tighten the waist belts.

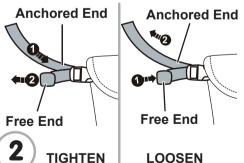

TIGHTEN LOOSEN

To tighten the restraint belts: Feed the anchored end of the restraint belt up through the buckle to form a loop

Pull the free end of the restraint belt 2.

To loosen the restraint belts:

• Feed the free end of the restraint belt up; through the buckle to form a loop **1**. Enlarge the loop by pulling on the end of the loop toward the buckle. Pull the anchored end of the restraint belt to shorten the free end of the restraint belt 2 .



Soothing Unit

 Make sure your child is properly secured in the seat.

IMPORTANT! Low battery power causes this product to operate erratically: no vibrations and the product may not turn off. Remove and discard the battery and replace with four new AA (LR6)

alkaline battery.

5